

# MOUNTING INSTRUCTIONS



## RGBW4ZTC

Remote controller for RGB/RGBW lamps

RT4, RT9 Touch Wheel RF Remote Controller

4 zone RGB or RGBW/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix



RGBW4ZTC  
4 Zone RGB/RGBW

CE RoHS LVD RED

### Features

- Apply to RGB or RGBW LED controller.
- Ultra sensitive color adjustment touch wheel.
- Independent dimming function of each R, G, B, W channel to achieve millions of colors.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

### Technical Parameters

Input and Output	
Output signal	R F(2.4GHz)
Working voltage	3 VDC (AAAx2)
Working current	< 5mA
Standby current	< 10µA
Standby time	1 year
Remote distance	30m (Barrier-free space)

Environment	
Operation temperature	Ta: -30°C ~ +55°C
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	EN301 489, EN 62479
Safety standard (LVD)	EN 60950
Radio Equipment (RED)	EN 300 328
Certification	CE, EMC, LVD, RED


  

Warranty	
Warranty	5 years

Weight	
Net weight	0.048kg
Gross weight	0.088kg

### Mechanical Structures and Installations

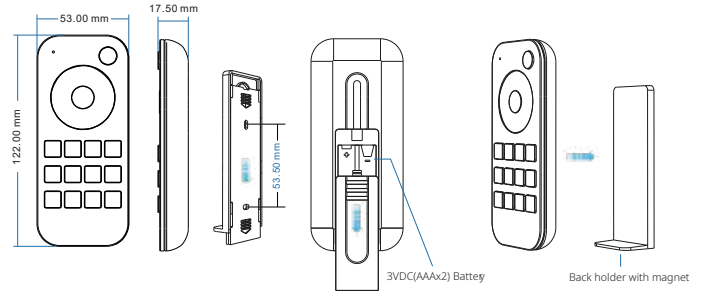

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly
- Option 2: fix the remote's back holder on the wall with two screws.
- Option 3: adhere the remote's back holder to the wall with paster

### Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel the indicator will display the same color
- When pressor touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

### Match Remote Control (two match ways)

End user can choose the suitable match/ delete ways. Two options are offered for selection:

#### Use the controller's Match key

Match  
Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.  
The LED indicator fast flash a few times means match is successful.

#### Delete

Press and hold match key for 5s to delete all match.  
The LED indicator fast flash a few times means all matched remotes were deleted.

#### Use Power Restart


Match  
Switch of the power then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote.  
The light blinks 3 times means match is successful.

#### Delete


Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote.  
The light blinks 5 times means all matched remotes were deleted.


• RGBW4ZTC 4 zone RGB/ RGBW remote





 : Short press turn on/off all zone light.


 : Touch to change current zone static RGB color


 : Short press select and turn on zone light,  
long press 2s turn off zone light.  
Short press multiple zone key fastly,  
will select multiple zone synchronously.

 : Short press get red, green or blue color directly.  
long press 1-6s adjust R/G/B brightness  
continuously to achieve millions of colours.

 : For RGB light, short press turn on/off white (RGB mix), long  
press 1-6s adjust saturation continuously, namely change current  
static RGB color to mixed white slowly. For RGBW light, short  
press turn on/off W channel, long press 1-6s adjust W brightness  
continuously, namely change saturation by add white color slowly.

 : Adjust dynamic mode for current selected zone,  
Short press run next dynamic mode, long press 2s run mode-cycle

 : For static color, adjust brightness,  
short press 10 levels,  
long press 1-6s for continuous 256 levels adjustment.  
For dynamic mode, adjust speed,  
short press 10 levels, long press 2s get the default speed.

 : Short press recall the scene, long press 2s save current state into S1/S2.  
the LED indicator display green when save OK.  
4 zone recall or save synchronously.

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. if no response from the receiver, please re-match the remote
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.